

FITT\_10342  
Issue-1  
SV14.3000



# OPERATING MANUAL

## Model SV14.3000

**SAVE THESE INSTRUCTIONS**

### Contents

#### **Section 1**

Warning: Installation.....	2
Warning: Operation.....	2
Warning: Disposal.....	3

#### **Section 2**

Instructions for use.....	4
Changing the bag and filter.....	5
Fitting Instructions.....	6

#### **Section 3**

Specifications.....	9
Dimensional Information.....	9

#### **Section 4**

Troubleshooting.....	10
Warranty.....	11

[www.sweepovac.com](http://www.sweepovac.com)

# Section 1

## IMPORTANT SAFETY INSTRUCTIONS

Dear Customer,

Please read through these operating instructions carefully. Please study and observe the safety instructions on the first few pages of this booklet. Please observe all cautionary markings in this manual, on the vacuum bags and on the Sweepovac vacuum appliance. Please keep these operating instructions for later reference and pass them on to any person carrying out cleaning, maintenance or repair, or to any subsequent owner of the appliance.

## WARNING: INSTALLATION

To reduce the risk of fire, electric shock, or injury:

A1 Installation must be carried out strictly in accordance with the supplied installation instructions.

A2 The appliance must be plugged into a switched socket, located so that mains power can be readily removed from the appliance for cleaning and similar purposes.

A3 The socket used must be protected by an Earth Leakage Circuit Breaker, (ELCB).

A4 Do not use the appliance with Mains supply extension leads.

A5 If removal of the supplied plug-top is required for installation, or replacement, it must be re-connected as follows.

The wires in this mains lead are coloured in accordance with the following code:

BLUE: Neutral; BROWN: Live.

GREEN/YELLOW: Earth

a. The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or marked Neutral.

b. The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or marked Live.

c. The wire which is coloured Green/Yellow must be connected to the terminal in the plug which is marked with the letter E or marked Earth.

d. Always ensure that the cable clamp is fitted and that it clamps the cable outer and NOT the coloured wires.

A6 If for any reason, it becomes necessary to replace the fuse, a 5 Amp time-delay fuse must be fitted.  
**NB. DO NOT USE A 13 AMP FUSE.**

A7 If the supply cable of the appliance is damaged, disconnect the appliance from the socket outlet immediately. The complete Sweepovac electrical module will have to be replaced. This should be carried out by Sweepovac Ltd only, or its appointed agent.

**NB. If in any doubt please consult Sweepovac Ltd directly, or a qualified electrician.**

A8 Fitting Clearances:

The vacuum must have the following clearances when fitted;

Rear of the machine to nearest surface - 20mm.

Top and bottom of the body of the machine to nearest surfaces - 2mm.

Left hand and right hand side - collectively - 100mm.

No extra ventilation is required.

## WARNING: OPERATION

To reduce the risk of fire, electric shock, or injury:

B1 The Sweepovac unit is designed to handle normal dry dust and debris in a domestic or office environment. It is not designed to handle water, or superfine industrial dust. Do not install or use the Sweepovac vacuum outdoors, in a bathroom, a wet area, within 10 feet (3.1m) of a pool. Do not expose to moisture, rain or snow. Do not pick up water or sweep water into the Sweepovac Vacuum.

# Section 1

- B2 Do not pick up water, or any other liquid. This will cause the product to fail, and invalidate your warranty.
- B3 It is not designed to pick up small sharp objects, such as pins, paper clips, small toys, etc.
- B4 Do not use without a clean dust-bag and filter in place. To do so can damage the appliance, and invalidate your warranty.
- B5 Do not operate the Sweepovac vacuum when the drawer is removed.
- B6 Do not fit anything other than original Sweepovac dust bags or filters. To do so can damage the appliance, and invalidate your warranty.
- B7 Always remove the plug from the wall socket before attempting any form of user maintenance or cleaning, as specified in this booklet.
- B8 This Sweepovac vacuum device is not intended for use by young children or infirm persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a responsible person concerning use of the Sweepovac vacuum to ensure that they can use safely.
- B9 Do not allow to be used as a toy. Close attention is necessary when used by children. Children should be supervised to ensure that they do not play with the Sweepovac Vacuum.
- B10 Do not sweep any combustible or flammable material such as petrol or lighter fuel into the Sweepovac.
- B11 Do not sweep in anything that is burning or smoking, such as cigarettes. Do not sweep in hot or warm ashes from a stove, fireplace etc.
- B12 Do not place any objects inside the Sweepovac chamber when the drawer is removed.
- B13 Do not put your hand inside the Sweepovac chamber when the drawer is removed.
- B14 Do not disassemble the Sweepovac vacuum as incorrect assembly may result in electric shock, malfunction or fire.

## WARNING: DISPOSAL

To reduce the risk of fire, electric shock, or injury:

- C1 The materials used in this product comply with international EU Directives on the Restriction of Hazardous Substances (RoHS)
- C2 The symbol shown below and on the product, means that it is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life, in conformance with the EU 'Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC)
- C3 If disposing of this product, please contact your local authority or the retailer where the product was purchased. In the event of difficulty, please contact Sweepovac Ltd. directly.



0681

## Section 2

### INSTRUCTIONS FOR USE



1

Sweep dirt and debris to a point in front of the Sweepovac.



2

Tap the lower part of the switch gently with the brush or with your foot.



3

Sweep in the debris.



4

If you wish you may clean the brush head by rubbing the head over the vacuum aperture



5

Tap the switch to turn off or allow the ten second timer to automatically turn off the unit.

Light will come on during operation when bag is full

Cleaning: To clean the front face of the Sweepovac. Switch off the mains.  
Rub the front using a slightly dampened cloth.

## Section 2

### CHANGING THE BAG AND FILTER



Slide out the bag drawer.



Press down the bag release catch to clip in or to remove the bag.



Replace the bag as shown **every 12 weeks (for normal domestic use)**. The bag can be changed at the appliance or the entire drawer can be carried to the bin and the bag disposed of there. Ensure the three cardboard lugs are slotted home. Push down clip to release the bag.



It is recommended to change the filter every year or if it appears dirty on visual inspection.



Push the drawer home until it clicks back into place.

#### HOW DO YOU KNOW THE BAG IS FULL?

1. If the light flashes on when in use.
2. If dirt has to be brushed right into the opening to be vacuumed up.
3. If the motor sound changes.

**Change the bag every 12 weeks (for normal domestic use) and the filter every 12 months**

## Section 2

### FITTING INSTRUCTIONS

#### Contents



Sweepovac unit



Template for cutting out faceplate



Dust bags x 5  
Filters x 1



Screws:  
4 no. 4mm x 20mm wood screw

#### Tools required

Pencil  
2.5mm hex head/alan key  
Screwdriver - PS2 head

Jigsaw  
Cut out template (supplied)



#### How to fit the unit



Remove the kick board from the kitchen and the front cover from the Sweepovac. Slide the Sweepovac unit into location.



Use the leveling foot to ensure the unit sits level and stable.

## Section 2

### FITTING INSTRUCTIONS


How to fit the unit

3



Remove the front panel from the Sweepovac unit. Place the template on the kickboard in the centered location as shown. Draw a line around the 3 sides.

4

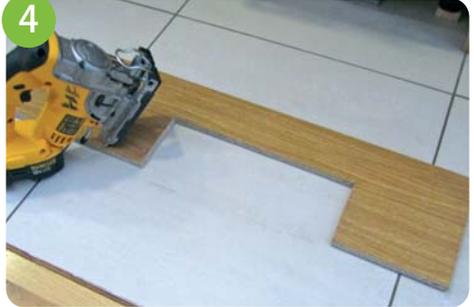

Use the jigsaw to accurately cut along the center of the line

5



Place Kick - board over the sweepovac unit.

6



Slide in Kickboard and Sweepovac unit together.

7



Screw the unit to the kickboard using the 4mm x 20mm screws provided.

## Section 2

### FITTING INSTRUCTIONS

How to fit the unit

8



Attach the front face plate using four M4 x 10mm hex screws (included).

9



Place a filter in the unit.

10



Place a dust bag in the unit.

11



Plug the Sweepovac into an available switched socket.

12



Unit is fully fitted. Well done.

# Section 3

## SPECIFICATIONS

### Switch:

The switch is on a 10 second timer and will turn off automatically after 10 seconds.  
Gently kick or tap **the bottom part** of the switch.  
Kick once for on. Kick once for off.  
Automatic turn off (10 sec timer).  
Stroke movement of switch: 2.6mm.

### Bag code:

SV14.3000bag

### Bag Specification:

50g brown outer paper + 30g spun-bound non woven with antibacterial agent.  
Micro filtration. Bag pre-filled with carbon particles for extra anti bacterial effect.

### Bag capacity:

1.9kg.  
The bag must be changed every 12 weeks (for normal domestic use.) It is recommended to change the filter once a year or if it appears dirty on a visual inspection




### Electricity:

230V. Standard 3 pin socket. 5 amp fuse.  
Plug in point must be accessible and switched so the machine can be isolated.

### Motor:

650 watt

## DIMENSIONAL INFORMATION

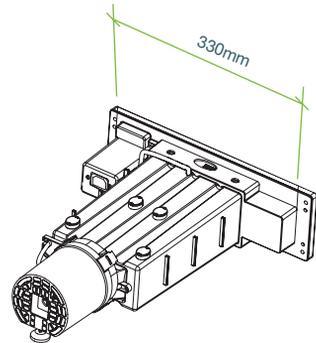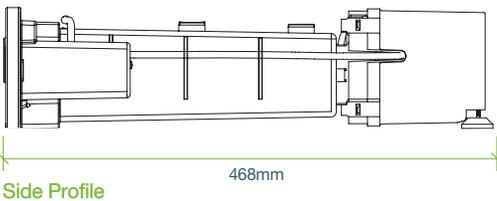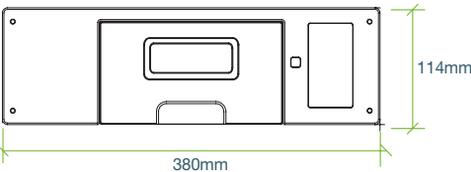

View of the part of Sweepovac that is inserted beneath the kitchen unit

## Section 4

### TROUBLESHOOTING

If suction reduces or the Sweepovac does not vacuum up the sweepings.

Open the drawer and check if the bag is full. Empty the bag. When changing the bag, make sure to hold the bag tray with the front pointing upwards. This will prevent any dirt falling back out through the opening. Replace old bag with a new bag. Also replace the filter located at the rear of the bag tray. Try again.

If the Sweepovac stops operating.

The Sweepovac motor has a thermal cut out. If the motor overheats, check for blockages and wait for one hour before operating again.

Check that other sockets in close proximity to the Sweepovac are working.

Check the fuse board for the house.

Check the fuse on the plug.

If you accidentally operate the Sweepovac without a bag.

Unplug from the mains. Remove the bag drawer and use the hose of a normal vacuum cleaner to clean out the internal cavity of the Sweepovac. Replace the filter and insert a new bag.

To check for and remove a blockage at the inlet aperture.

Remove the bag drawer, hold the drawer vertically with the front pointing upwards, this will allow the sweepings to fall to the rear of the bag. Lay the drawer flat, remove the bag, insert a single finger through the bag holding pipe, any obstruction will be felt and can be removed. A finger can also be inserted into the outside opening where the dirt is vacuumed through.

To check for and remove a blockage at the motor inlet.

Ensure the Sweepovac is plugged out. Remove the bag drawer. Visually inspect the rear of the cavity where the bag drawer sits. A grill at the rear protects the motor. This grill should be free from any obstruction.

If none of the above are effective.

Contact an electrical repair shop or Sweepovac if the guarantee is still valid.

To remove the entire Sweepovac appliance from it's location.

Consult the fitting instructions that accompanied this manual, ensure that the Sweepovac is disconnected from the power before removal.

# Section 4

## WARRANTY

Dear Customer,

Thank you for purchasing a Sweepovac unit. The Sweepovac unit and associated products are designed and manufactured to a high standard and with normal use should last many years. The warranty period on your Sweepovac unit is 2 years from the date of purchase. To gain warranty assistance in the unlikely event of the unit not working, you will need to provide us with a copy of your proof of purchase (Invoice, till receipt etc.). The period of warranty is calculated starting 2 weeks after this date. This is to allow for timely installation.

Warranty assistance includes:

Replacement of unit if deemed faulty. Please note that the customer is responsible for the removal of the faulty unit and post and packaging of the unit back to Sweepovac at the address below. Sweepovac will cover the cost associated with the return of the replacement unit back to the customer.

Normal use is described in detail in the operations section of this manual. It includes :

Never allowing water to come into the machine or near the electrical parts inside the machine.

Ensuring that wet debris or heavy items are never vacuumed into the machine.

Please insure that the unit is installed as per installation instructions.

We recommend changing the vacuum bag every 12 weeks (for normal domestic use).

Please ensure that any malfunction is checked against the trouble shooting section in this manual before removal and dispatch to Sweepovac.

Please contact a registered electrical contractor to replace any damaged cables immediately.

We hope you enjoy your Sweepovac.


### **Sweepovac Limited,**

Yellow House, Cullenagh, Portlaoise, Co Laois, Ireland.

### *General Terms and Conditions*

1. SweepOvac Ltd. warrants that, when dispatched from a Sweepovac warehouse, the appliance is free from defects in materials and workmanship for the Warranty Period.
2. The Warranty period is 24 months from the registered date of purchase.
3. The Warranty only applies to products that have been installed in accordance with the enclosed Sweepovac installation instructions
4. The Warranty only applies to products that have been operated and maintained in accordance with the enclosed Sweepovac Operation/Maintenance Manual.
5. During the warranty period, Sweepovac, or its authorised agents, will, at no extra charge and subject to these terms and conditions, repair or replace any parts which it considers to be defective.
6. This Warranty does not apply to dust bags, filters, accessories or similar consumable parts.
7. The Warranty do not apply in the following situations:
  - a. Incomplete or improper installation.
  - b. Vacuuming of very fine dust or wet materials.
  - c. Use without recommended dust-bags or filter.
  - d. Use of non-recommended dust bags or filters.
  - e. Normal wear and tear.
  - f. Failure to properly maintain or service.
8. Proof of purchase is required before you can make a claim under this warranty.

**TOP**




## **IMPORTANT**

When removing bag tray, hold upright to ensure dirt does not fall out

**CHANGE  
THE BAG  
EVERY  
12 WEEKS!  
OR FULL**

## **FITTING THE BAG**

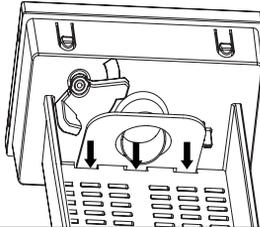

**To purchase new bags and filters  
please go to:**

**[www.sweepovac.com](http://www.sweepovac.com)**

**Address:** Sweepovac Ltd,  
Yellow House, Cullenagh,  
Portlaoise, Co. Laois,  
Ireland.

**Web:** [www.sweepovac.com](http://www.sweepovac.com)  
**Email:** [info@sweepovac.com](mailto:info@sweepovac.com)